



Accent Chair Assembly Instructions

Your accent chair comes packaged in one box.
DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.
Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching the finish.

A	B	C	D	E	F
					
1PC	1PC	1PC	M6*30mm 4PCS	M6*20mm 4PCS	1PC


Step 1

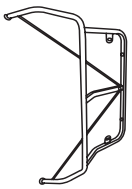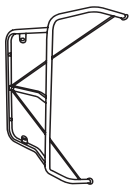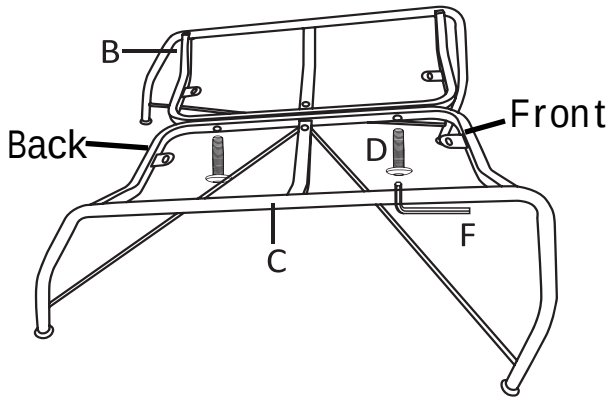

The higher end of assembled frame is the front of chair.

Please fully screw the 2 metal bases together.


Step 2

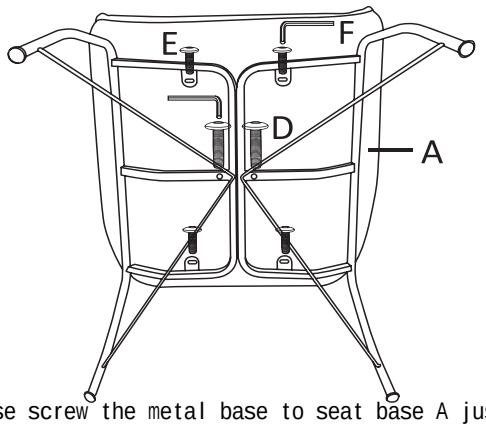

please screw the metal base to seat base A just far
enough to hold the parts together (<50%),after all

8 screws screwed 50% onto the seat base, please go back and tighten all the screws on the metal frame to seat base 100%.

Step 3

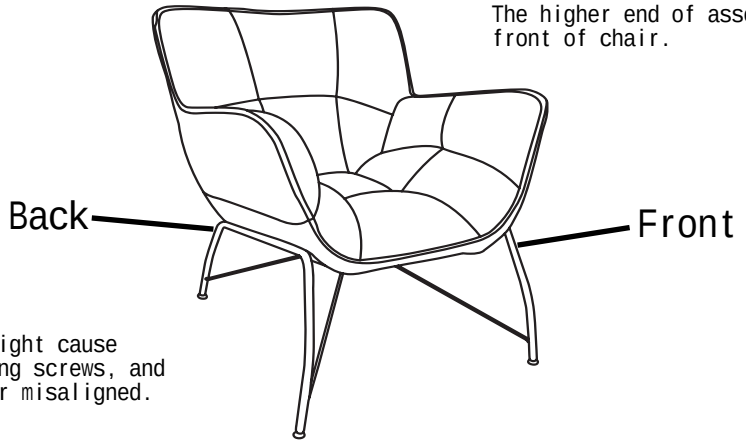

The higher end of assembled frame is the front of chair.

Omitting above step might cause difficulty with fitting screws, and the holes might appear misaligned.

Your accent chair style may differ from images. Care for your furniture by periodically tightening all legs. Fabric will fade or discolor in direct sunlight. Minimize exposure to direct sunlight to extend the life of your furniture.